



Standard Double Cylinder Fitting Instructions


Installing a Standard Double Cylinder

How to change your cylinder on a PVCu or Composite door

On the open edge of the door look for the larger screw which falls in line with the bottom of the cylinder and remove screw.

With the key inserted into the cylinder, turn slightly while pulling to enable the cylinder to be removed.

To replace the cylinder reverse the above procedure.

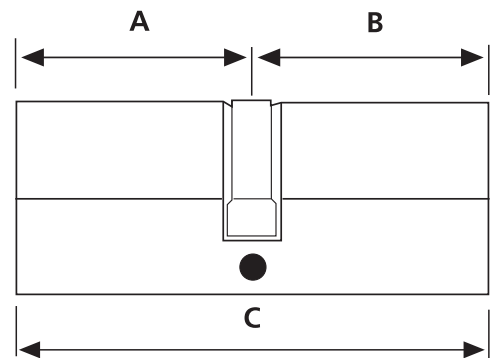

How to change your cylinder on a Timber door

On the open edge of the door remove the two screws from the face plate, this will reveal another screw which falls in line with the bottom of the cylinder and remove the screw.

With the key inserted into the cylinder, turn slightly while pulling to enable the cylinder to be removed.

To replace the cylinder reverse the above procedure.

Cylinder Size Guide

- A** Measurement from the centre of the cam to point A (refer to above diagram)
- B** Measurement from the centre of the cam to point B (refer to above diagram)

Note: Your cylinder may be longer on one side than the other.