

ERA

722-85-2 PVCu Window Restrictor Fitting Instructions

Installing a PVCu Window Restrictor

Note: Suitable for fitting to Top or Side Hung PVCu Windows. Suits 60mm or 70mm profile windows (the thickness of the window frame)

To fit a PVCu Window Restrictor you will require the following tools:

- Pencil
- Ruler
- Screwdriver

- 1 Place restrictor body in friction stay groove closest to the corner edge of the window, if you have corner locking locators; place the restrictor body as close as you can but no more than 120mm from the corner edge.


To find which size arm you require, open the window and place both arms in the groove. The arm which fits flush to the frame is the correct version to use.

- 2 Close the window and mark preferred position on the frame and window with a pencil.

Open window and locate the centre of arm in line with your marking and drill in place.

- 3 To fix the lock body, with the lockings arms facing you, centre the middle of the forks in line with the mark and drill into place.

- 4 Test operation.

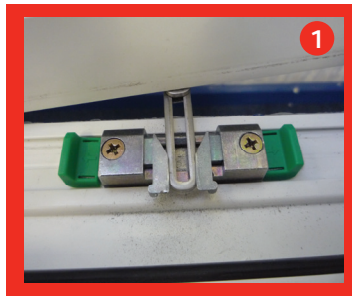

Opening the window beyond restricted position

Open the window slightly.

Using two hands slide both the green thumb catches outwards in opposite directions. The window can now be pushed open.

To close the window - The window should be returned to the closed position as soon as possible which will automatically re-engage the restrictor.

Additional Information

Operation - Allows the window to be opened to a maximum distance of 100mm.