 


ERA


Flush Double Cam Lock Handing Instructions



Right Hand


Locks are supplied non-handed, to ensure the lock is the correct orientation for a **right handed** window:

- The RH marked on the gearbox is the correct orientation - clearly saying 'RH'
- Flush Cam are facing inwards
- The size text on the facebar is the correct orientation (right way up)

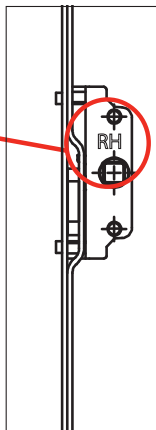


Text Direction

RH handing marking on gearbox is correct orientation.

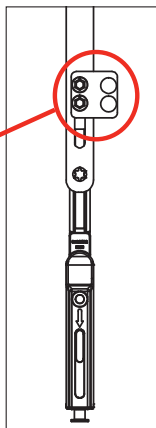

Cam Direction


Ensure cams are facing inwards.

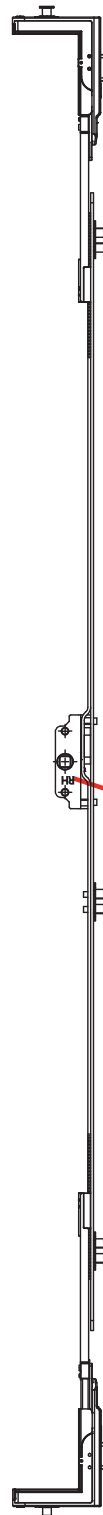

Left Hand


Locks are supplied non-handed, to ensure the lock is the correct orientation for a **left handed** window:

- The RH marked on the gearbox is upside down
- Flush Cam are facing inwards
- Cams may need to be pushed into an open/ closed position before installing the window handle
- The size text on the facebar is upside down

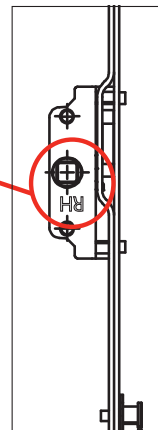

Text Direction

RH handing marking on gearbox is upside down.

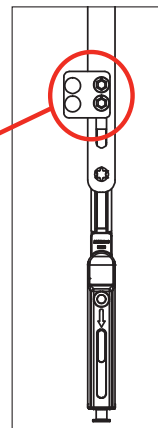

Cam Direction

Ensure cams are facing inwards. You may need to push cams to the correct locked /open position when re-handing, before installing the window handle.